


# BALDWIN

## Interior Latchset

### Installation Instructions Passage, Privacy, Full & Half Dummy

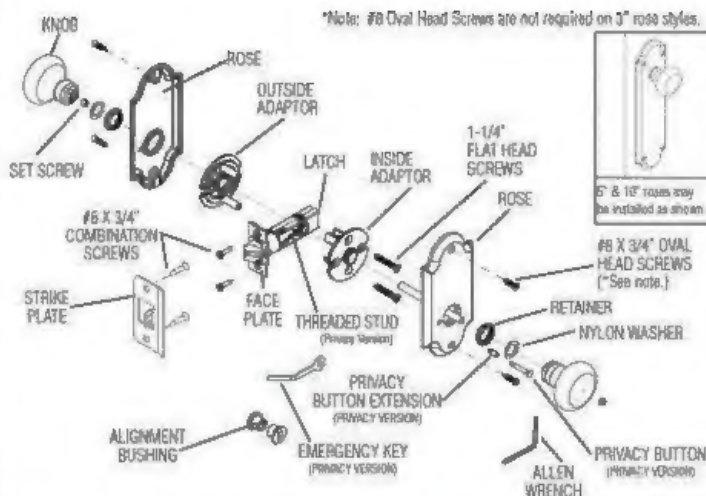


\*Note: #8 Oval Head Screws are not required on 3" rose styles.



#### DOOR PREPARATION: PASSAGE & PRIVACY LATCHSETS ONLY


1. Fold the template on the line and locate on at desired height (about 40" from floor). Place folded edge on low side of door bevel. Mark holes on door for appropriate backset, rose style and size.
2. Caution: Recheck bore hole locations before drilling. Drill the 2-1/8" Face Bore through the door first. Drill the 1" diameter Edge Bore through to the inside of the 2-1/8" Face Bore. For 5" & 10" rose styles, mark but do not drill pilot holes for #8 surface mount screws. This will be done in a later step.
3. Insert the latch into the edge of the door. Trace an outline of the latchplate onto the door edge. Mark screw hole center locations and drill 1/8" pilot holes.
4. Chisel out the area marked in step 3 to a depth of 5/32" or until latchplate is flush with door edge. Proceed to Passage or Privacy installation.

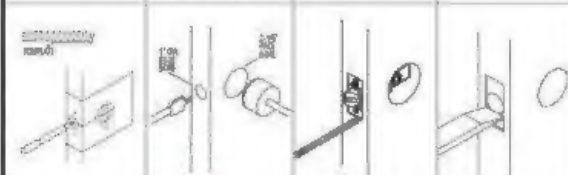


#### STRIKE PREPARATION: PASSAGE & PRIVACY LATCHSETS ONLY

1. Using the strike portion of the marking template, locate and mark strike mounting screws and centering points for your door thickness.
2. Align the strike and trace outline onto the door frame using mounting screw marks for location.
3. At the screw marks, drill (2) 1/8" dia. pilot holes for the screws. Bore 7/16" dia. X 3/4" deep hole.
4. Chisel out the area marked in step 2 to a depth of 1/16" or until strike is flush with door frame.

Install strike using (2) #6 Flat Head combination screws.

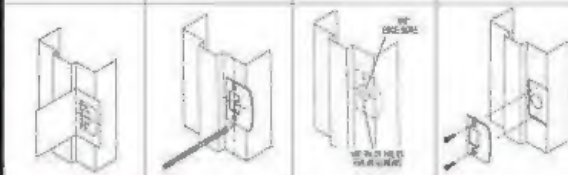

#### HALF DUMMY INSTALLATION

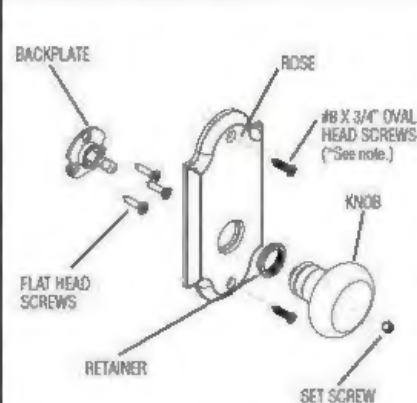

1. Locate the position for hole in door. If not used with a double door, the hole location should be approx. 40" from floor. Drill a 5/8" hole 1/4" deep one side of the door. **DO NOT DRILL THROUGH DOOR.**
2. Place backplate on door so that the flat surface is toward the floor. The flat surface should be parallel to the floor and perpendicular to the door edge. A builder's square should be used for best results. Using the backplate as a template, mark center locations for (3) screw holes.

Remove backplate and pre-drill (3) holes for screws 1/2" deep using a 1/16" drill bit. Install backplate with (3) flat head screws provided.

3. Attach the roses by screwing the threaded retainers onto the adaptors. Orient the rose as desired and securely tighten by using the spinner tool. For 5" & 10" roses, ensure rose is parallel with door edge and drill 3/32" x 1/2" deep pilot holes at marked locations. Install #8 oval head screws into door.

4. Orient the knob or lever so the set screw is pointed down & toward the hinges of the door. Slide the knob or lever onto the end of the spindle until it touches the adaptor and secure with set screw.

